

DIRKS

QUALITY PARTS FOR CLASSIC TRUCKS




Window Regulator Instructions

1. Remove panels from the door
2. Unbolt the window track and remove the glass from the door.



3. Remove old channel from glass

4. Print template and tape to the door panel with the hole centered and bottom of the template flush with raised edge of panel.

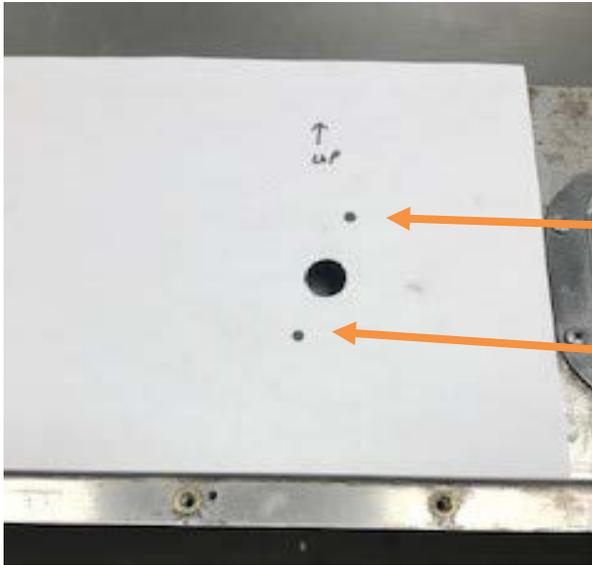

5. Mark and drill 1/4" holes
6. Re-install glass and window track
7. Verify window regulator is square with bottom of door
8. Mark and drill 2: 1/4" holes to fasten the lower bolts on regulator



9. Test fit window channel to door and mark with sharpie
10. Remove channel and re-install on glass with rubber seal
11. Verify the window regulator operation
12. Re-install inner door panel (upper mounting holes for regulator will need to be drilled in panel for early model trucks)

